


No-Dig Ground Anchor Installation

MIS016

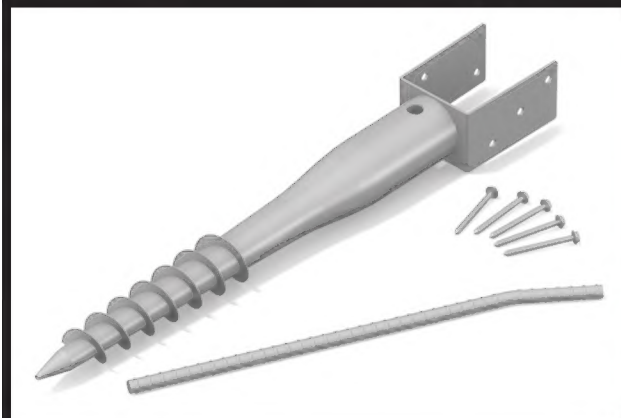

Package Contents:

- 1x No-Dig Ground Anchor
- 1x Rebar
- 5x Lag Bolts

Materials Required:

4x4 Wood Post (48 inch length recommended, not included)

Tools Required:

Cordless drill, 7/16" socket bit, tape measure, & level


General Information:

- Read instructions carefully before beginning assembly.
- Please refer to local codes and regulations before installing your ground anchor
- No-Dig Anchor performs best in standard soil conditions, not suitable for rocky or sandy conditions.
- When using the ground anchor with a mail post installation please note that USPS regulations require the front of the mailbox to be set back 6-8 inches from the curb.
- In the event of missing or defective parts, please call our **customer service** department toll free at **1-866-363-8834** or send an email to **info@gomayne.com**.

1


Place the ground anchor in the desired location. With downward pressure, twist into the ground using the piece of rebar provided. Every few turns check that the anchor is straight.

Ground Screw

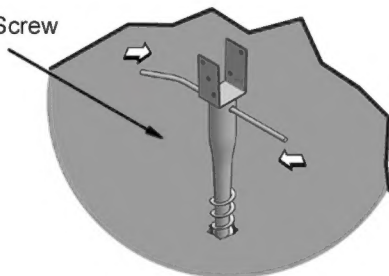


2

Insert the 4x4 wood post (not included) into the ground anchor saddle as shown below. Secure the post to the anchor using the 5 lag bolts provided.

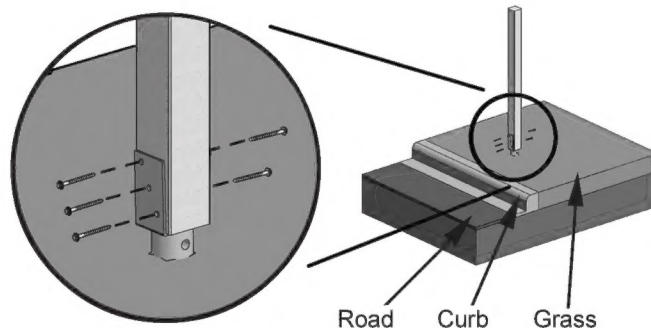

3

Slide the decorative mail post sleeve over the wood post and anchor assembly. The bottom of the decorative post should sit flush on the ground. Some extra force may be required for the sleeve to pop over the saddle and bolts on the ground anchor.

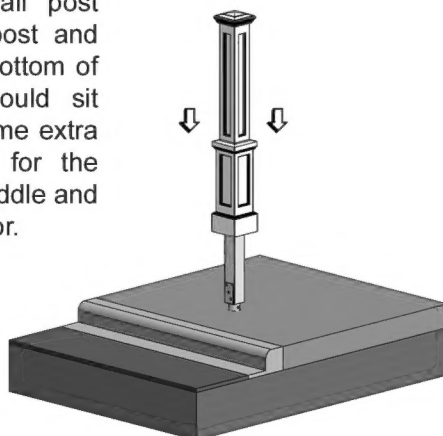

MAYNE[®]
Outdoor Products of Distinction
www.gomayne.com